

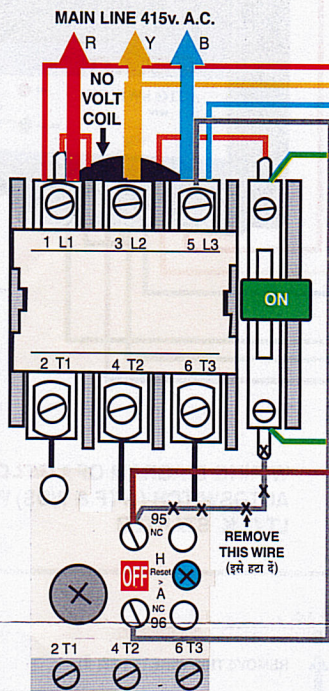




WIRING DIAGRAM FOR *GELCO* AUTOSWITCH WITH DIFFERENT DOL STARTERS

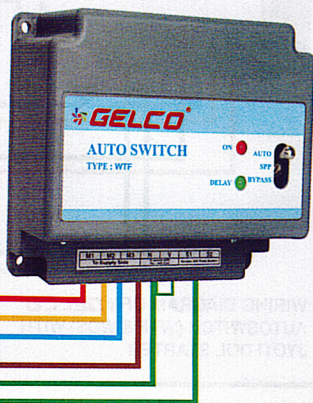

WIRING DIAGRAM OF *GELCO* AUTOSWITCH (WTF & WDS) WITH SIEMENS DOL STARTER

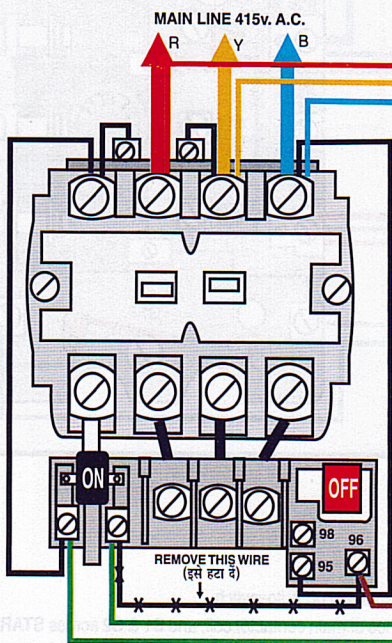

WIRING DIAGRAM OF *GELCO* AUTOSWITCH (WTF & WDS) WITH CUTLER-HAMMER DOL STARTER

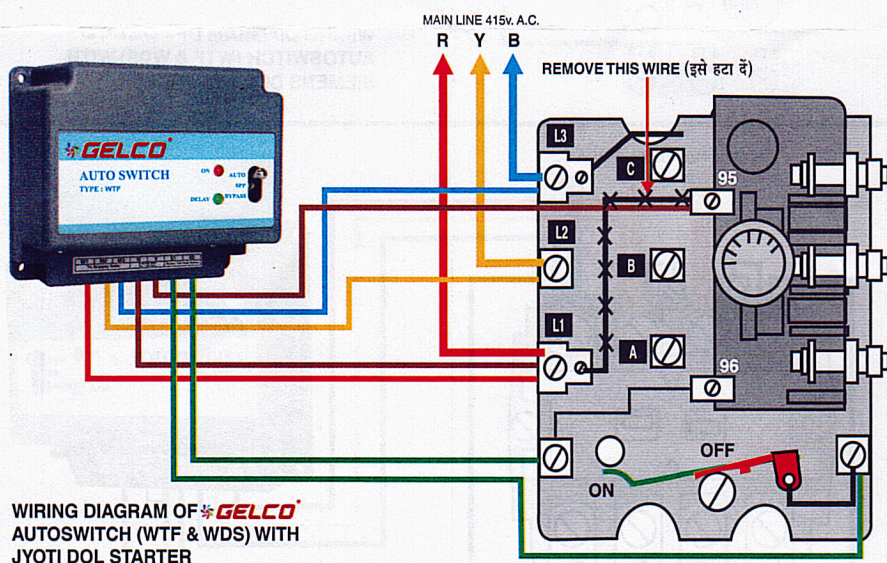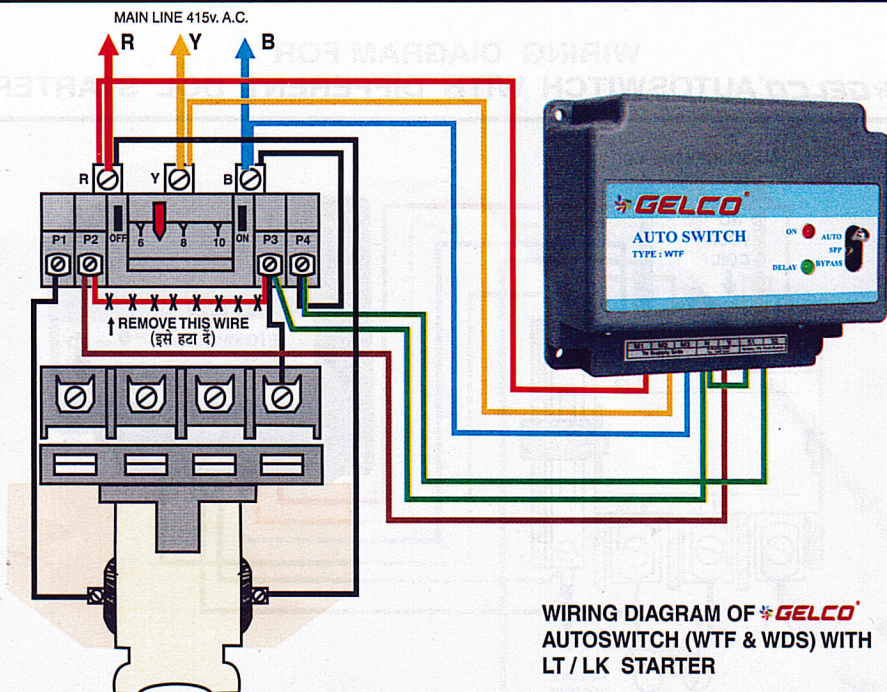

GENERAL INSTRUCTION :

1. Keep switch in **AUTO** mode for automatic starting requirement.
2. Keep switch in **SPP** mode for manual operation.
3. In case of failure of Auto-switch, keep it in **MANUAL** mode.
4. If starter does not start after 2 minutes, interchange **M1** & **M2** terminals on Auto-switch.
5. For **FASD** / **ATS** or other starters, connect **N** & **V** terminals in series of main contactor coil, and **S1** & **S2** across **START** push